

	<b>AirIM-100</b> Universal input	 AirIM-100S	 AirIM-100L	 AirIM-100NB
	<b>AirTM-100M</b> Pulse converter	 AirTM-100S	 AirTM-100L	 AirTM-100NB
	<b>AirIM-100/M</b> Universal input (for DIN rail)	 AirIM-100S/M	 AirSF-100L/M	
	<b>AirMD-100</b> Motion detector	 AirMD-100S	 AirMD-100L	 AirMD-100NB
	<b>AirSF-100</b> Flood detector	 AirSF-100S	 AirSF-100L	 AirSF-100NB
	<b>AirWD-100</b> Magnetic detector (indoor)	 AirWD-100S	 AirWD-100L	 AirWD-100NB
	<b>AirWD-101</b> Magnetic detector (outdoor)	 AirWD-101S	 AirWD-101L	 AirWD-101NB
	<b>AirSD-100</b> Smoke detector	 AirSD-100S	 AirSD-100L	 AirSD-100NB
	<b>AirQS-100</b> Air quality sensor (CO <sub>2</sub> )	 AirQS-100S	 AirQS-100L	 AirQS-100NB
	<b>AirQS-101</b> Air quality sensor (CO)	 AirQS-101S	 AirQS-101L	 AirQS-101NB
	<b>AirSLC-100/LWES</b> Street light controller - LUMAWISE plug		 AirSLC-100L/LWES	 AirSLC-100NB/LWES
	<b>AirSLC-100/NEMA</b> Street light controller - NEMA socket		 AirSLC-100L/NEMA	 AirSLC-100NB/NEMA
	<b>AirSLC-100</b> Street light controller - DALI		 AirSOU-SLC/DALI	
	<b>AirSOU-100</b> Twilight sensor	 AirSOU-100S	 AirSOU-100L	 AirSOU-100NB
	<b>AirPD-100</b> Parking detector	 AirPD-100S	 AirPD-100L	 AirPD-100NB
	<b>AirWS-100</b> Ultrasonic fill-level sensor	 AirWS-100S	 AirWS-100L	 AirWS-100NB